



1. Prepare a template for dimensioning the holes.
2. Apply protective tape to the edges of the trunk lid.
3. Measure dimensions so that the measuring device is not crooked, but straight.
4. Measure the points marked on the dimensioning template at a right angle of 90 degrees.
5. The measured points will determine the location of the drilling template. The template for drilling holes on the left side contains an additional hole for the LED power cable.

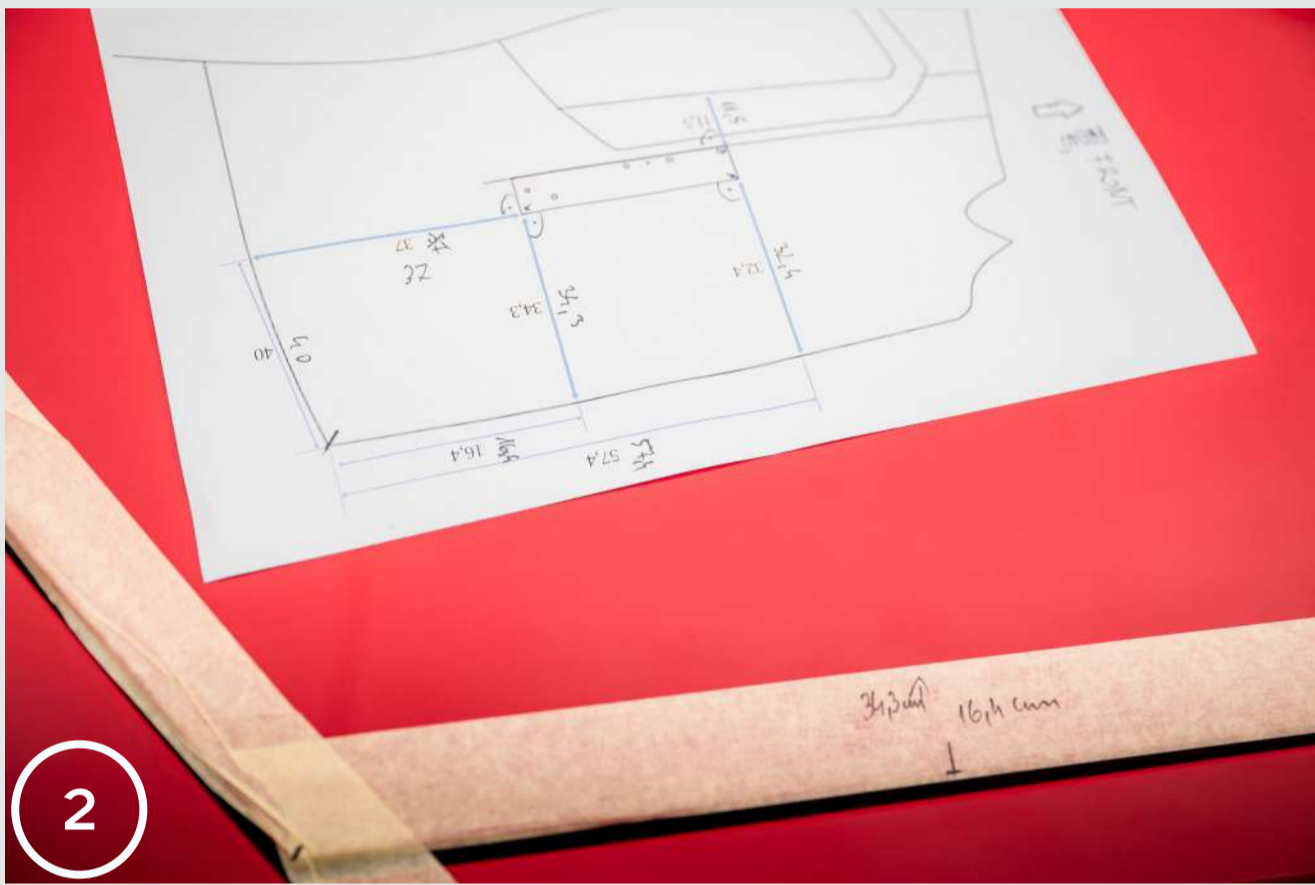

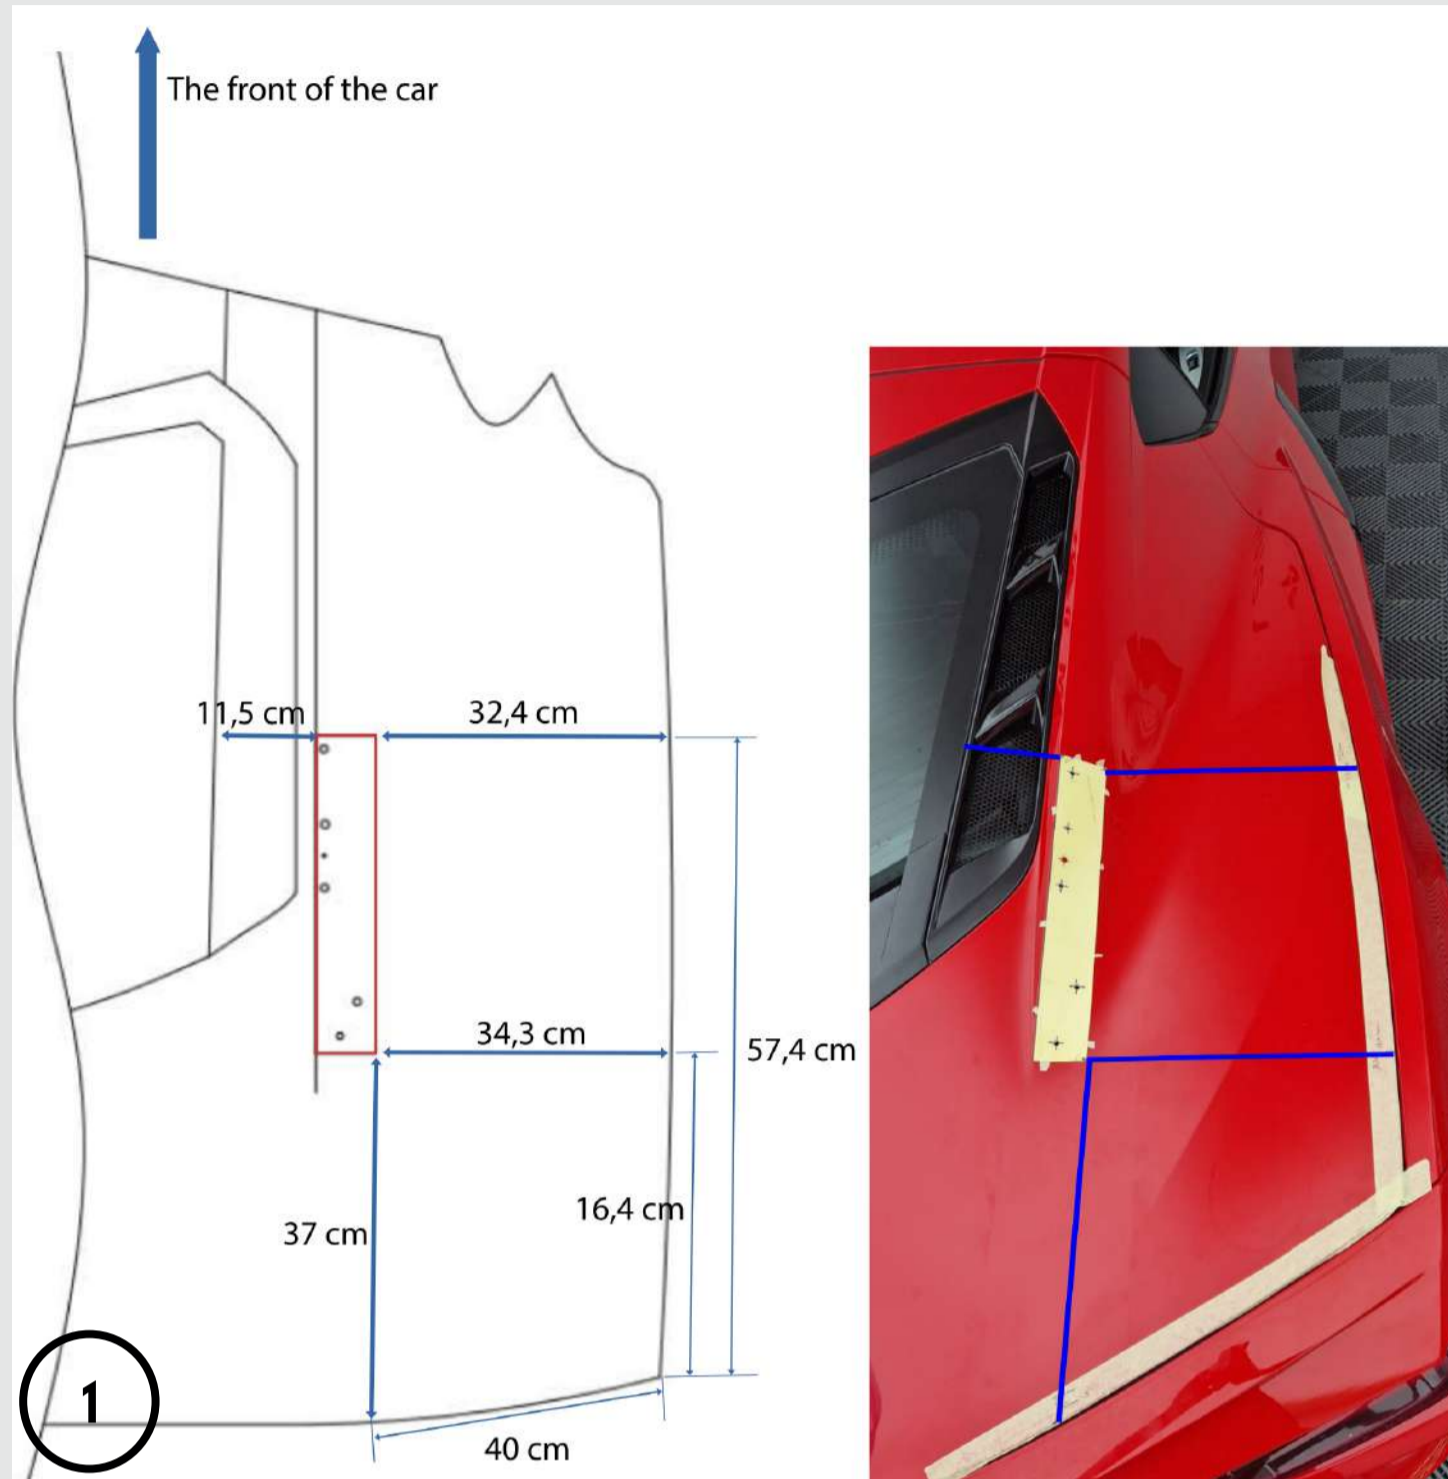

6. Mark the points where the holes will be drilled.

7. Drill according to the marked points.

8. Prepare fastening screws and thread locking adhesive with medium peel strength.

9. Glue the gaskets to the bottom of the spoiler mounts.





10

10. Apply protective glue to the screw threads.



11

11. At the bottom of the trunk lid, place the mounting plate in the line of the holes.

12. Place the spoiler mount on the top of the trunk lid. Tighten the screws so that the screw head and conical washer are on the inner side of the trunk lid.



12

13. The same will be repeated for the second mounting plate.


14. On the left side, pass the LED power cable through the additional hole in the mounting plate.

15. Prepare a torque wrench and set it to a force of 8 Nm.


16. Tighten the mounting screws to the specified torque.



13

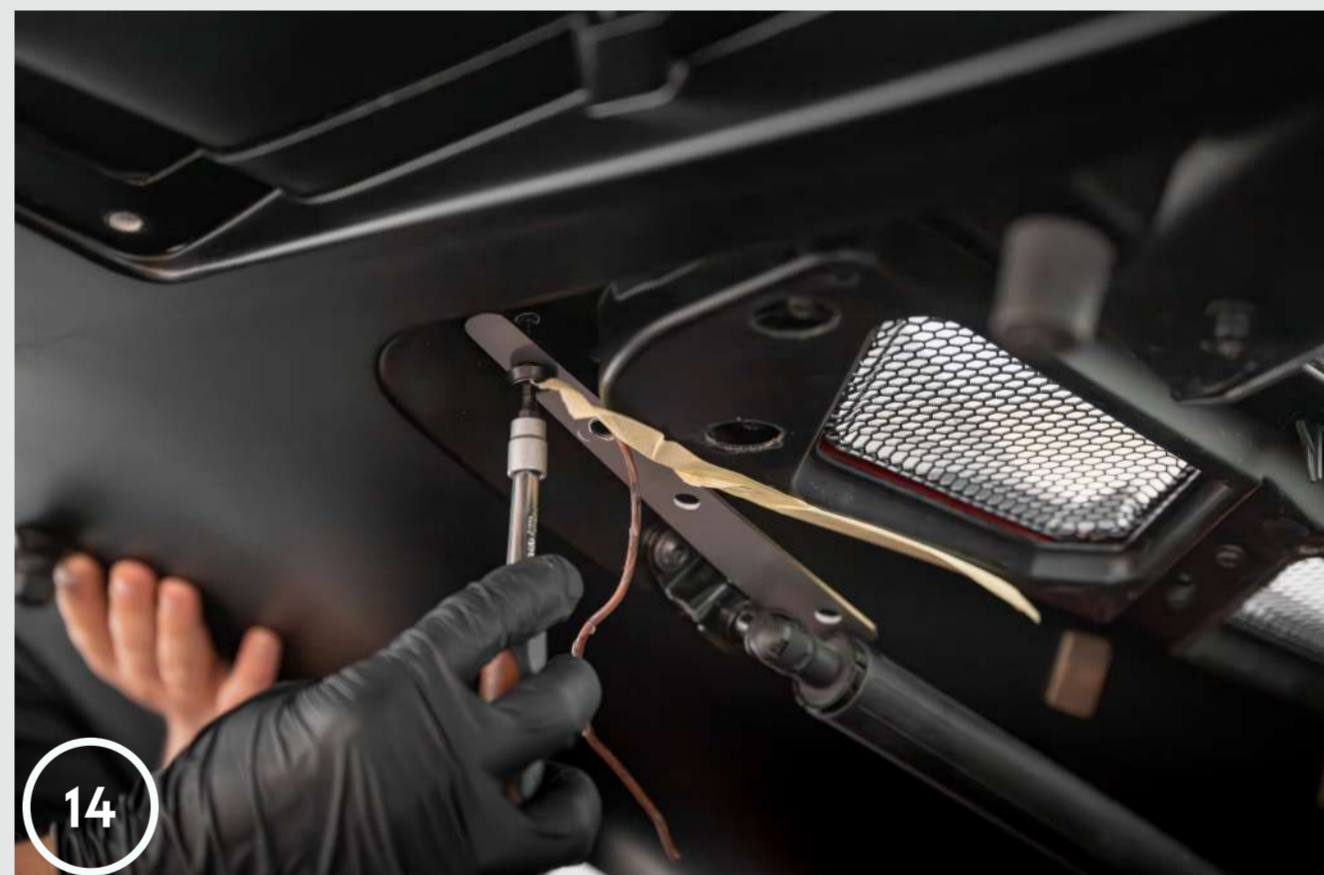


14

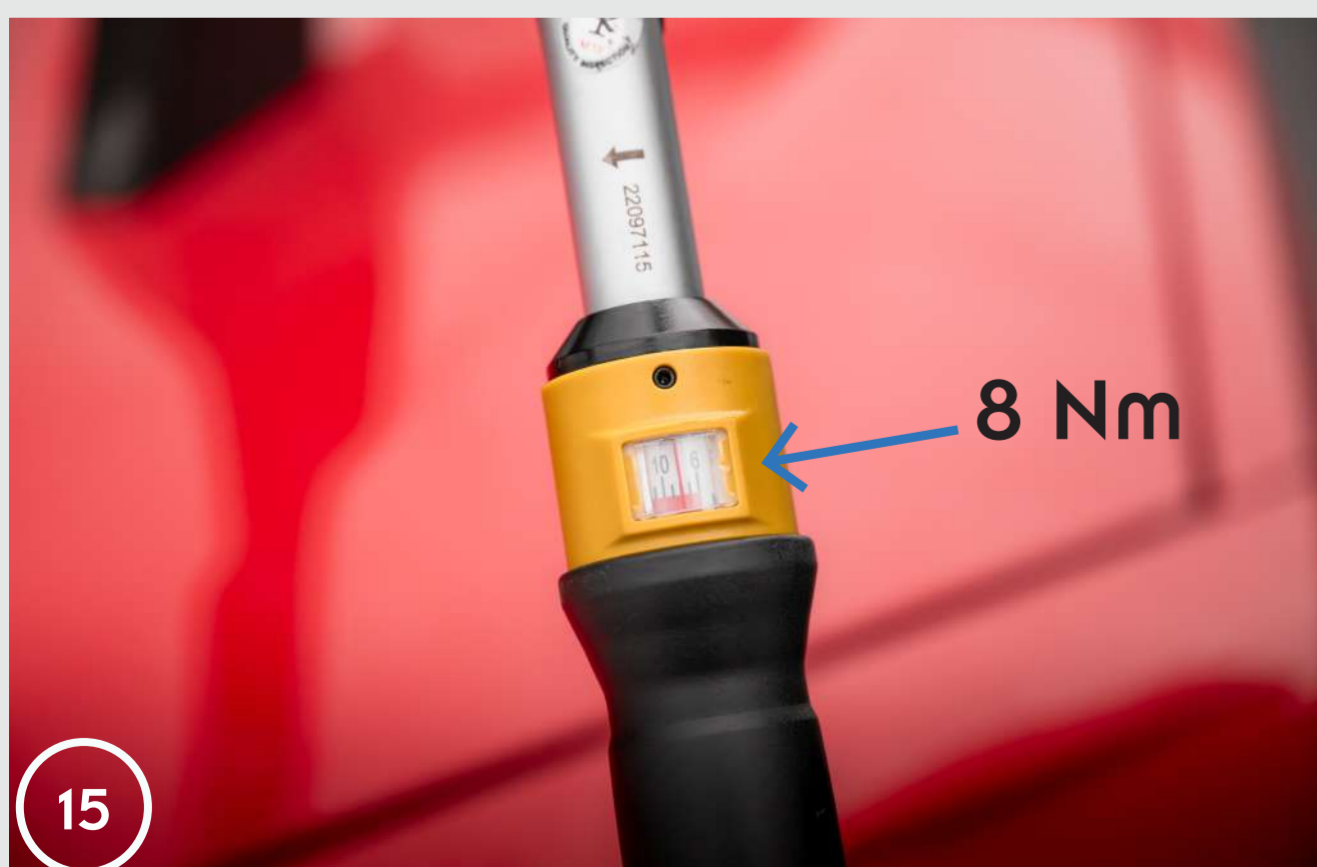

15

8 Nm

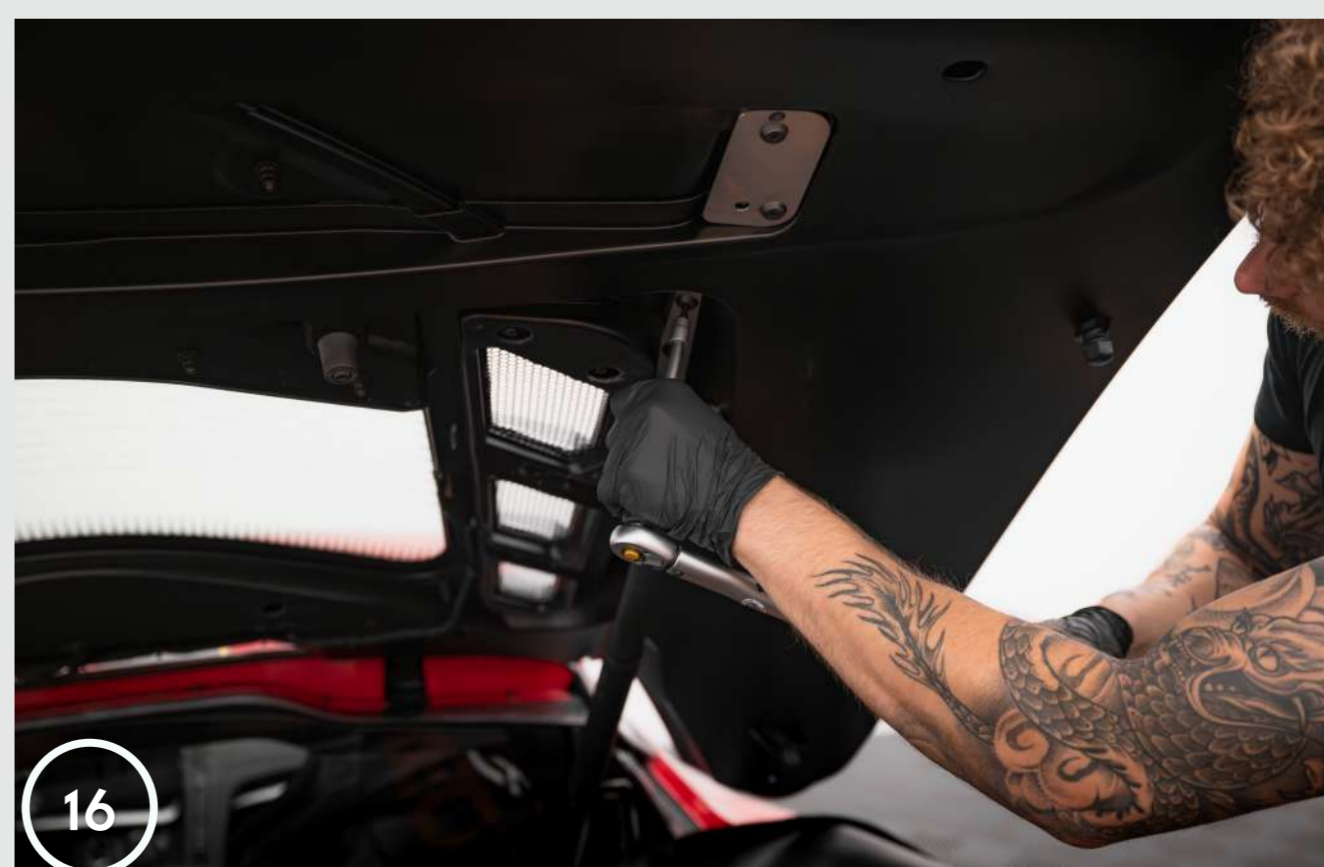

16



17. Attach the spoiler to the screwed spoiler mounts.

18. Put the mounting screw through the center hole and screw the spoiler to the mounts so that it stays in place.

19. Secure the LED power cable and attach it to the trunk lid.

20. Tighten the remaining spoiler mounting screws.

21. Place the plate with the bumper on the inside of the trunk lid below the mounting plate so that it fits into the indicated location.

22. Mark the locations for the mounting holes.

23. Drill the marked locations.





24. Place the bumper plate on the drilled holes and mount it using rivets.

25. Repeat this step on the other side of the trunk lid.

26. Screw the flaps ends to the spoiler.

27. Ready.



Maxton Design App  
For Glowing Spoiler  
Download here ↓



