



Range Rover Evoque HSE Dynamic Mk1 Facelift Front Splitter Assembly Instruction


- 1.Remove the front bumper.
- 2. Screw the splitter to the bumper according to the basic assembly instructions.
- 3.In the marked places, make holes through the splitter and bumper so that the long screws from the mounting kit can be inserted through the holes.
- 4.After inserting them through the holes, long screws should be screwed together using washers and nuts.
- 5. The splitter mounted in this way is ready.



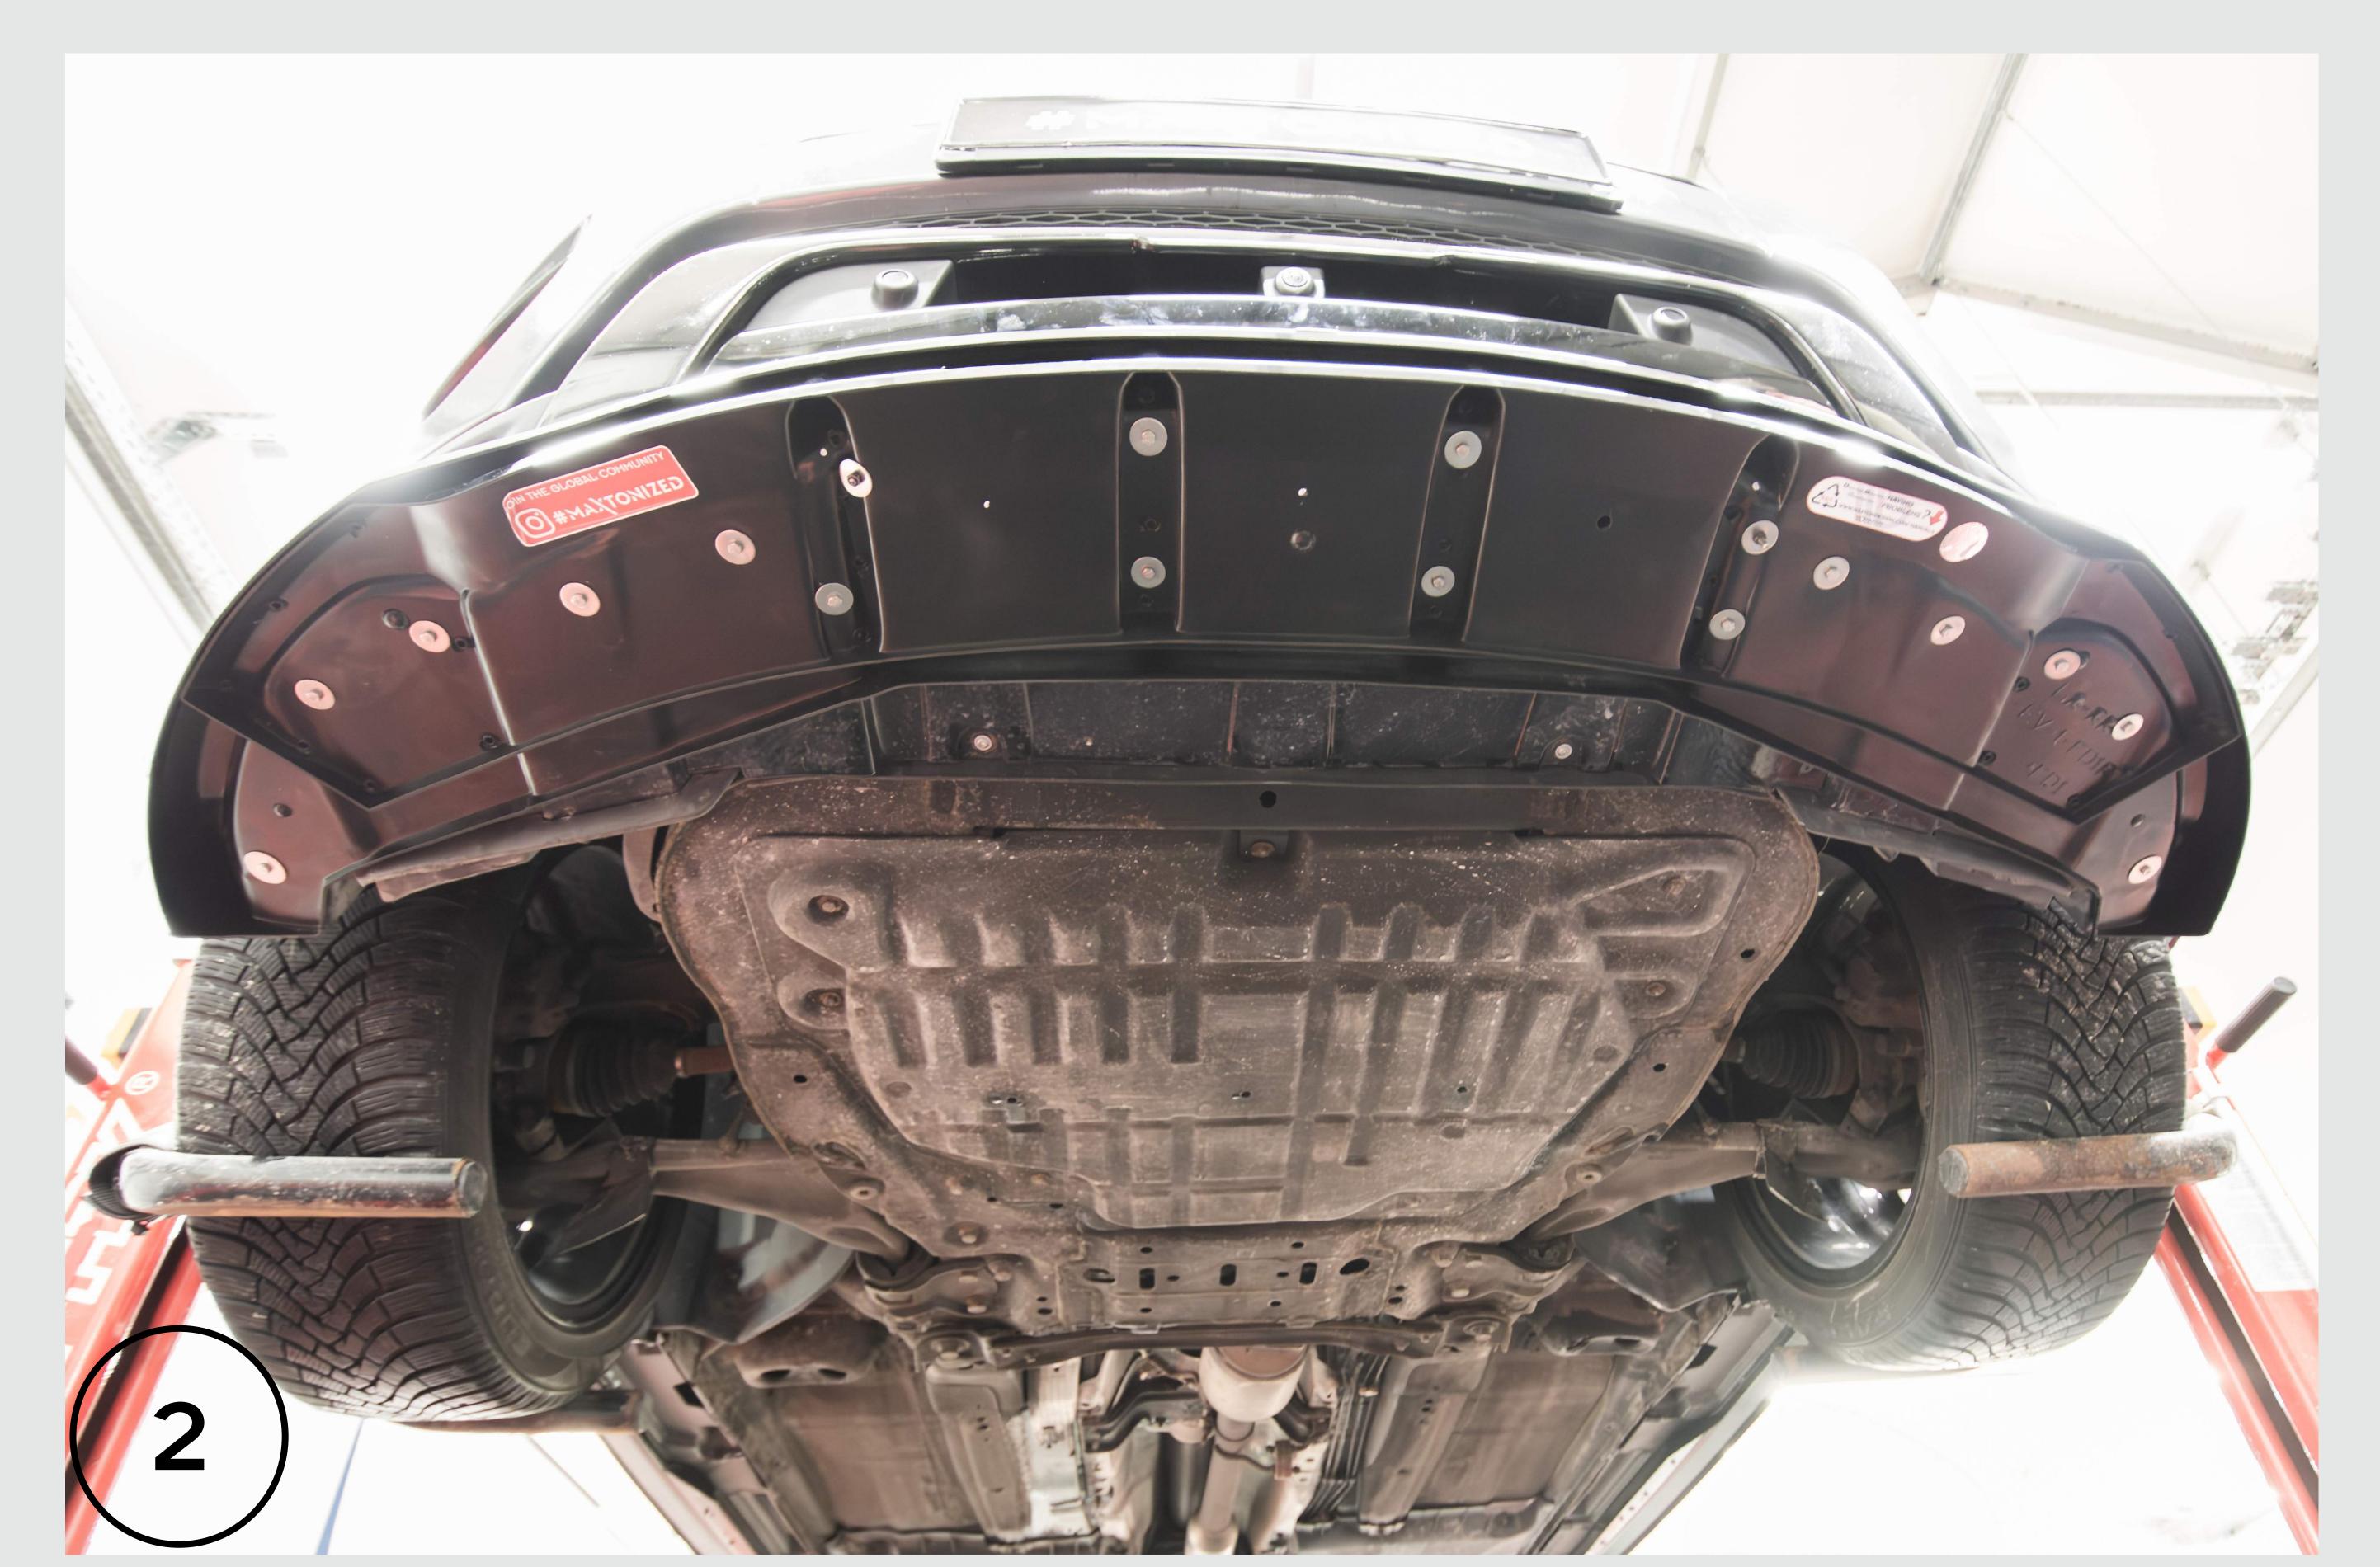

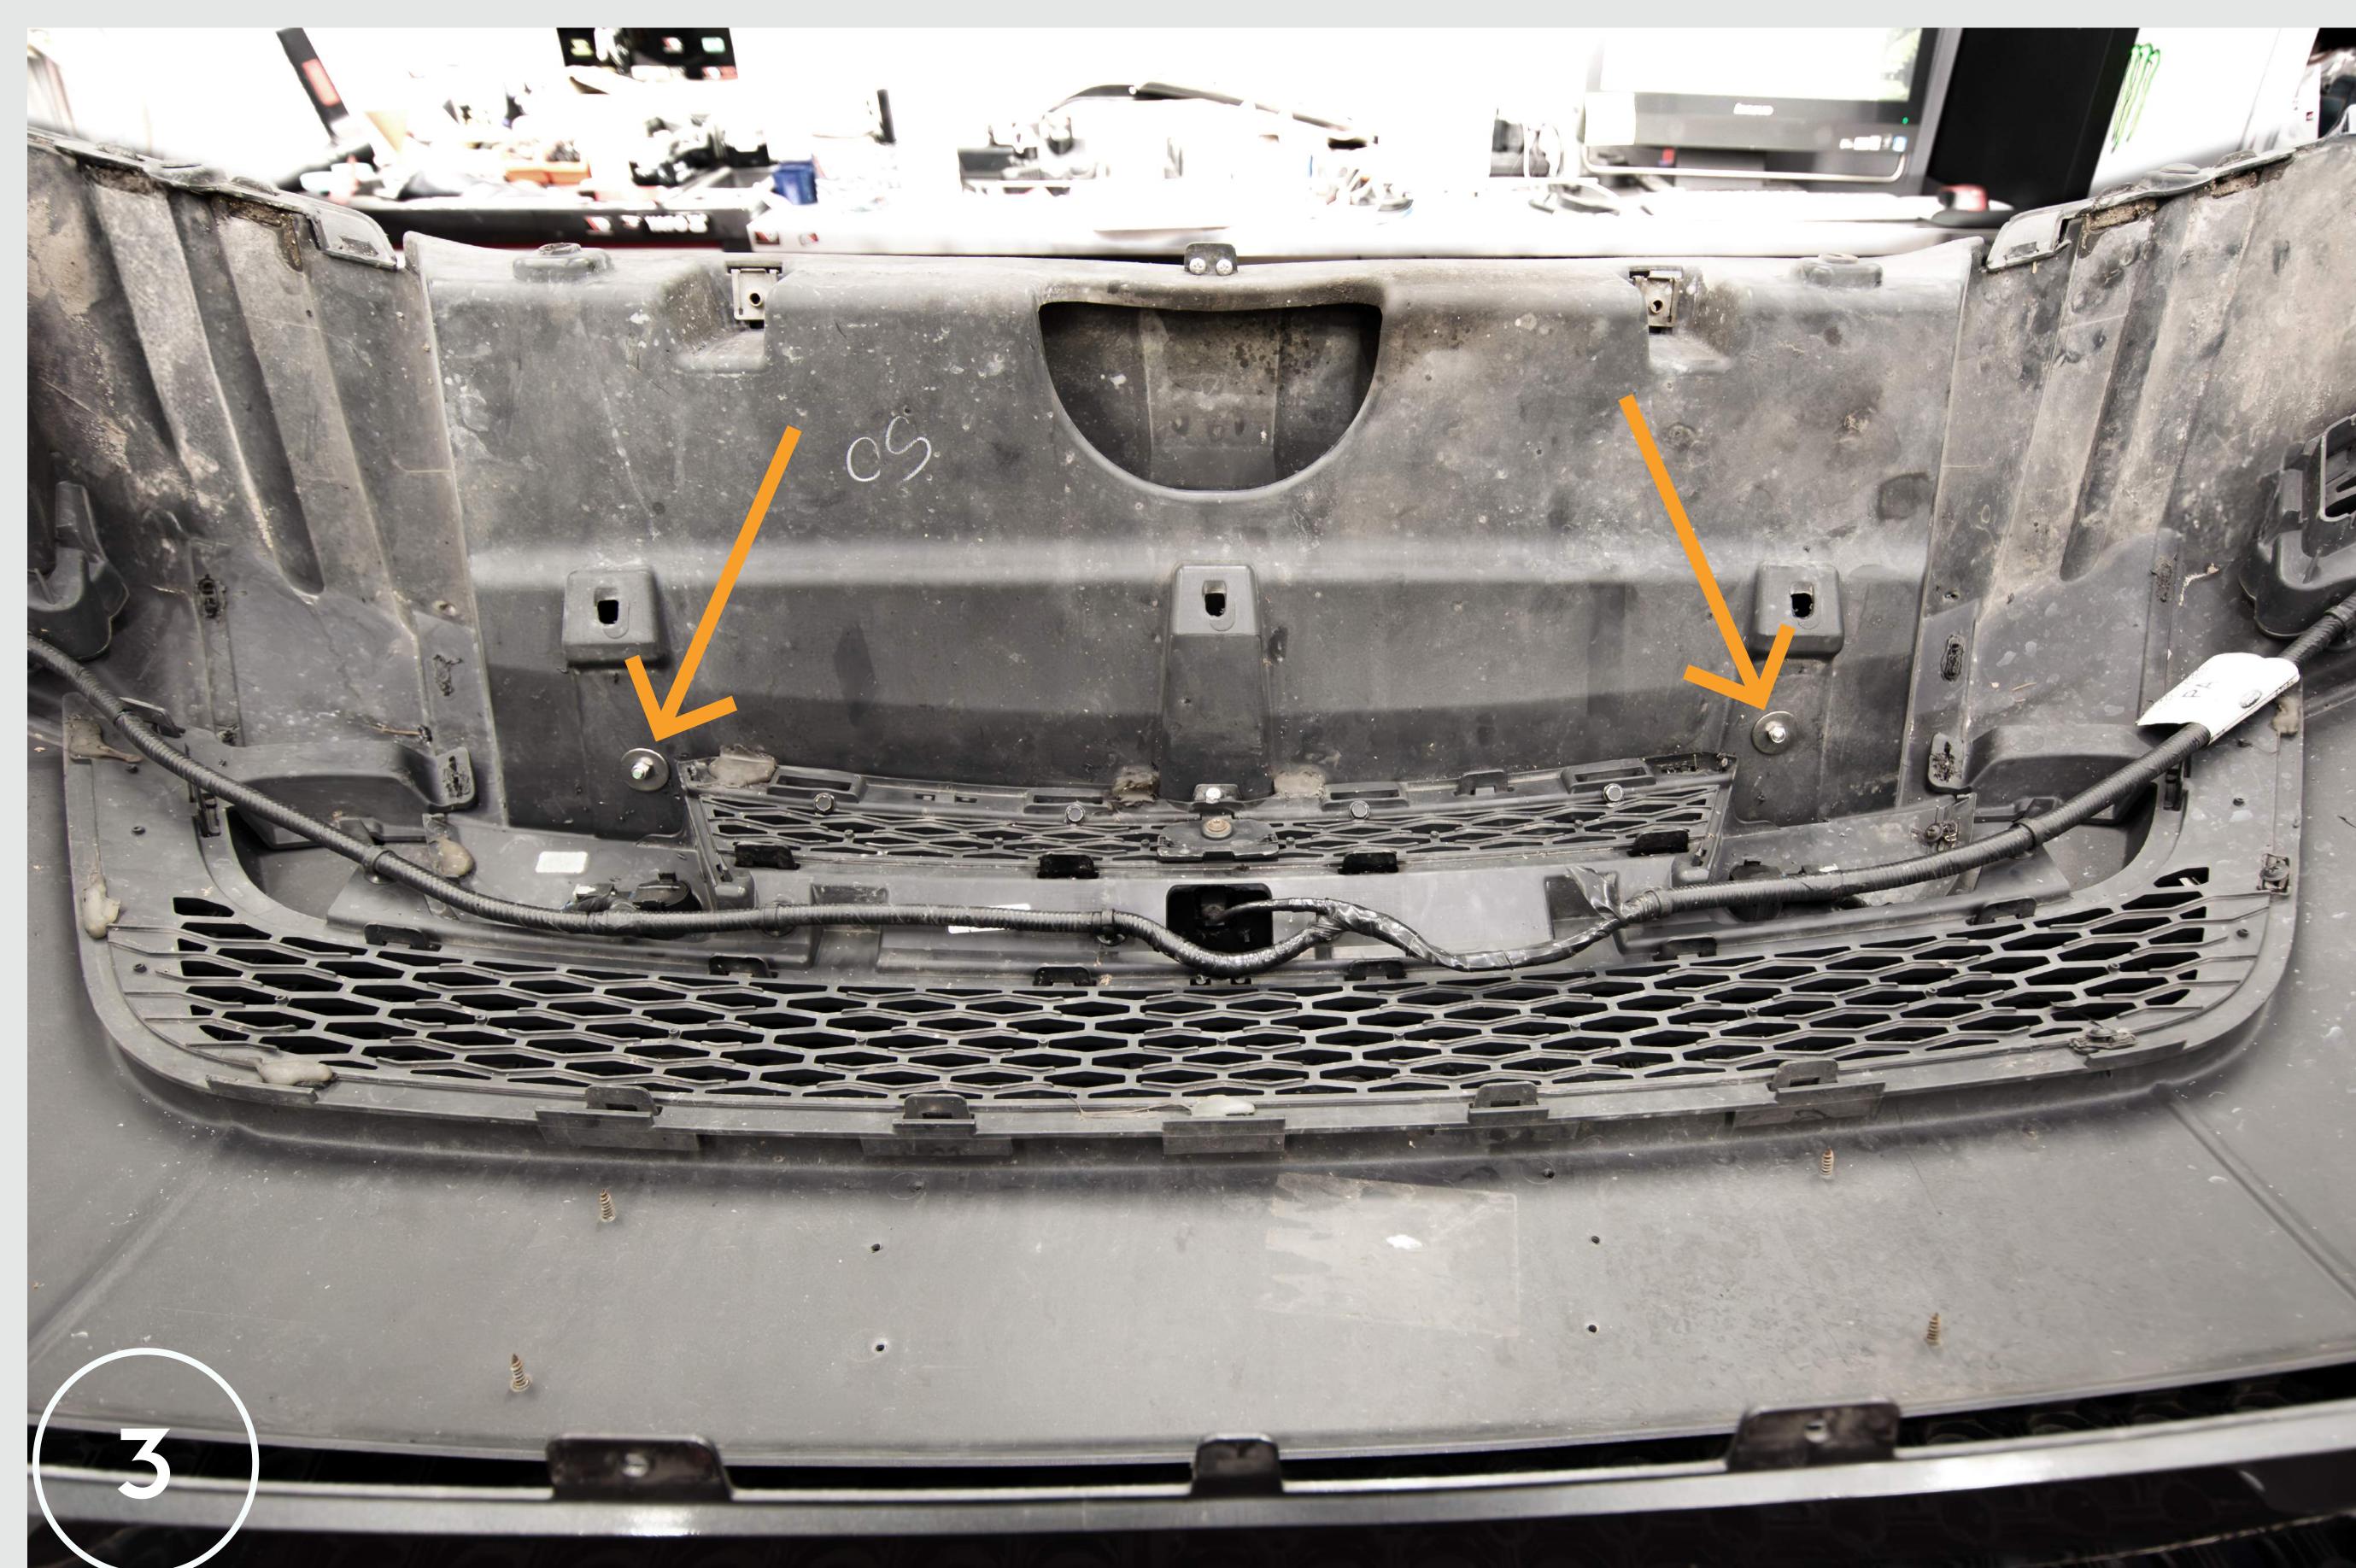



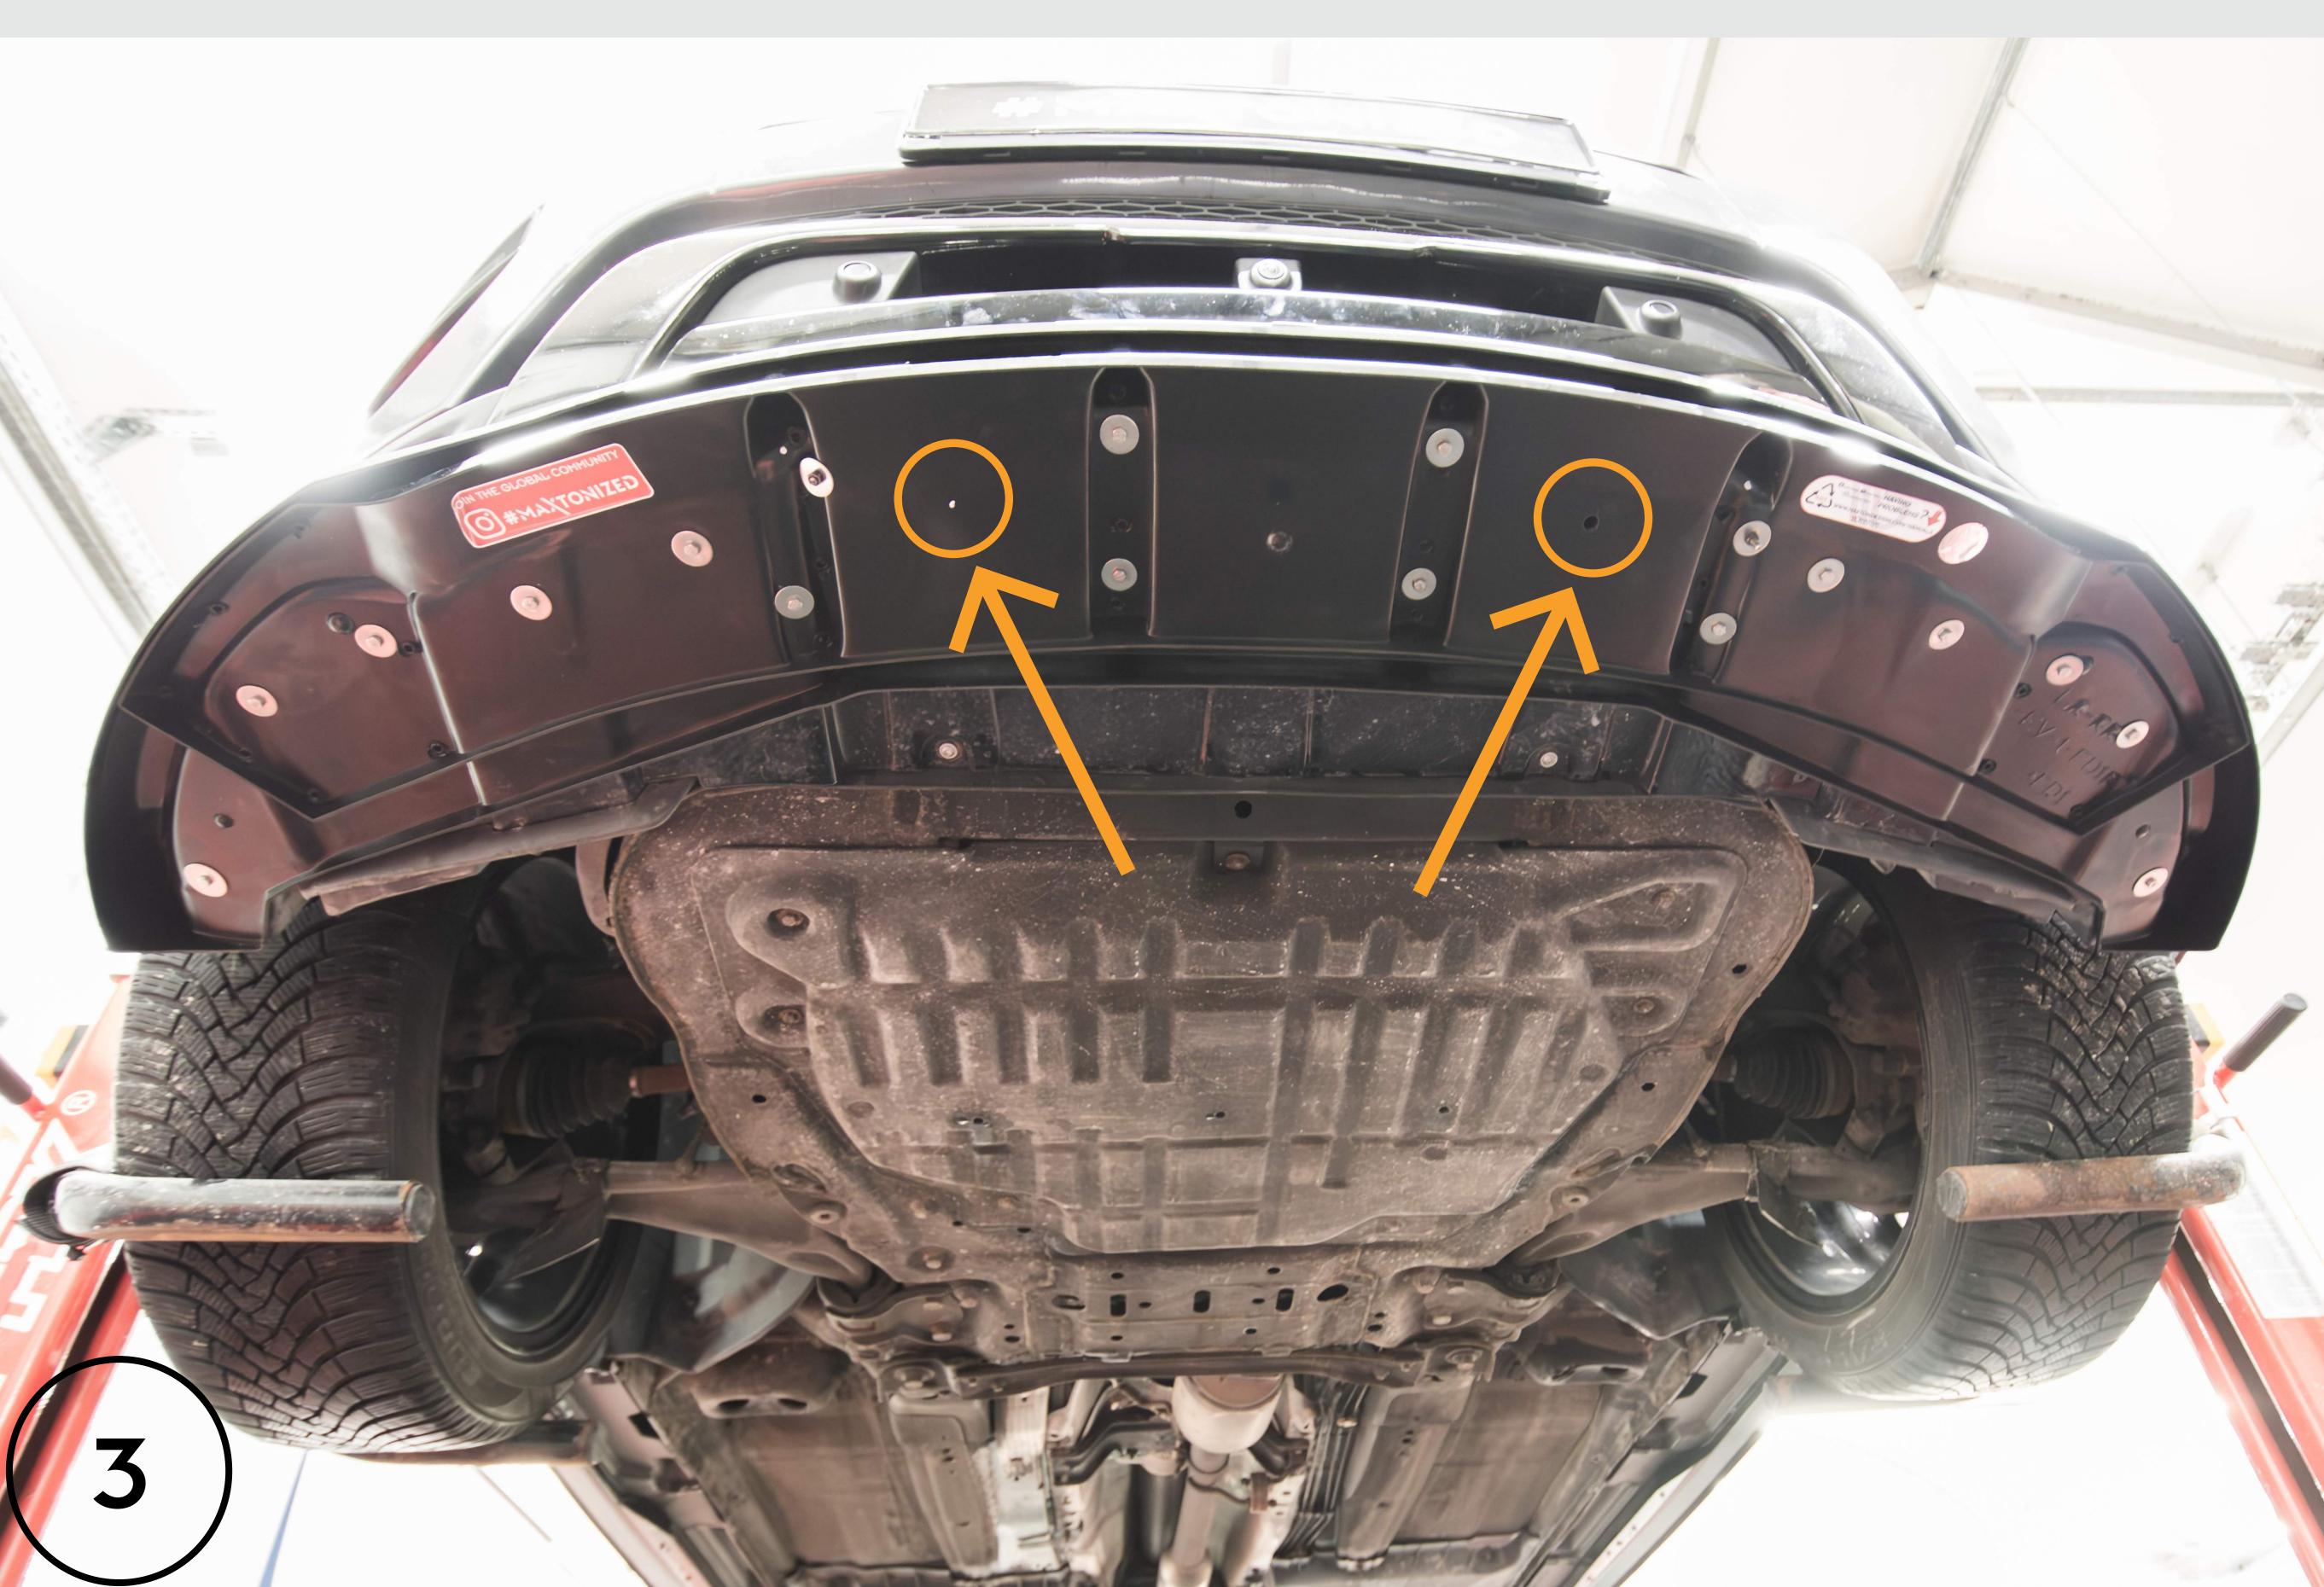



- +48 14 307 06 04
- Sales@maxtondesign.eu
- Maxton Design
- Maxtondesign_official
- Maxton Design Official
- MaxtonOfficial